

# Optimum M4100

## Docking Station Installation




**WARNING:** When performing any maintenance on Hypercom products, ensure that you are grounded with an ESD strap in an anti-static environment. The battery pack is a Li-Ion polymer battery which can explode if not properly replaced, handled or disposed of in a proper manner. Dispose old batteries in accordance with local regulations. Use only batteries recommended by Hypercom as a replacement. For more information about Hypercom batteries, refer to the *Hypercom Battery Safety Tips* on [www.hypercom.com/library](http://www.hypercom.com/library).


**CERTIFICATIONS:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Refer to the *Optimum M4100 Terminal Installation Guide* for details.  
 - UL/cUL Listed    - FCC: Part 15, Part 68    - IC: ICES, CS-03    - CE    - A-tick



Remove docking station, power cord, RJ11 cable and AC adapter from its packaging.

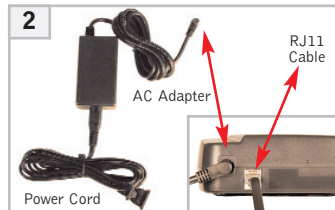

Assemble power cord & AC adapter (as shown). Insert AC adapter end into docking station (as shown). Plug power cord into power outlet.  
 Note: For dial-backup, plug RJ11 cable into docking station (as shown). Insert other end into the PSTN wall outlet.

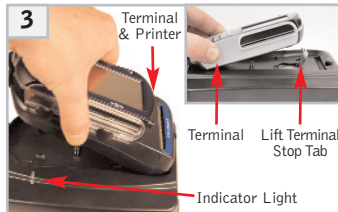

Insert & snap in place the terminal/printer on the docking station (as shown). You can also charge the terminal on the docking station (as shown).  
 Indicator Light: Green light - Power is supplied to the docking station.  
 Red light - Terminal is correctly attached to the docking station.



To remove terminal/printer, press firmly on the docking station latch (as shown) to release.

**World Headquarters:**  
**Hypercom Corporation** | 2851 West Kathleen Road, Phoenix, Arizona 85053, USA  
 Tel: +1.602.504.5000 | Fax: +1.602.504.4655 | [www.hypercom.com](http://www.hypercom.com)  
 © 2007, Hypercom Corporation. All rights reserved. 940513-002 Rev. A 04/07



NORTH AMERICA | CENTRAL AMERICA | LATIN AMERICA | ASIA/PACIFIC RIM | EUROPE | MIDDLE EAST | AFRICA