


Optimum M4100



Printer Installation

WARNING: When performing any maintenance on Hypercom products, ensure that you are grounded with an ESD strap in an anti-static environment. The battery pack is a Li-Ion polymer battery which can explode if not properly replaced, handled or disposed of in a proper manner. Dispose old batteries in accordance with local regulations. Use only batteries recommended by Hypercom as a replacement. For more information about Hypercom batteries, refer to the *Hypercom Battery Tips Guide* on www.hypercom.com/library.

CERTIFICATIONS: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Refer to the *Optimum M4100 Terminal Installation Guide* for details.

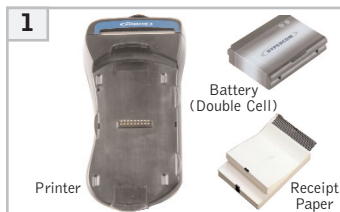

Remove printer, battery and receipt paper from any packaging.



Remove battery cover from the printer. Insert battery and reattach battery cover. Note: Remove old battery and dispose properly according to local regulations.



With your fingers, open paper cover (as shown). Position receipt paper so the arrow is on top & points towards the printer. Remove paper sleeve, then lift & hold first sheet of paper while inserting receipt paper (as shown). Close paper cover. Note: Paper may jam if sleeve is in the printer.



Insert the top of the Optimum M4100 terminal into the recessed area on the top of the printer. Press firmly until it snaps securely in place. Turn terminal on.

World Headquarters:
Hypercom Corporation | 2851 West Kathleen Road, Phoenix, Arizona 85053, USA
Tel: +1.602.504.5000 | Fax: +1.602.504.4655 | www.hypercom.com
© 2007, Hypercom Corporation. All rights reserved. 940513-003 Rev. A 04/07

