



**NURIT 2085 EASY USER GUIDE**

**APPLICATION POS 4.70 OR HIGHER – RETAIL AND RESTAURANT**

Cards are swiped with magnetic stripe **down** and to the **right**. They can be swiped either **top to bottom** or **bottom to top**.

**CREDIT CARD PURCHASE**

| <b><u>STEP</u></b> | <b><u>TERMINAL PROMPT</u></b> | <b><u>ACTION</u></b>  |
|--------------------|-------------------------------|---|
| 1.                 | Idle Prompt                   | Swipe card or manually enter credit card number. <b>ENTER</b>   |
| 2.                 | Expiration date (manual)      | Enter card expiration date (MMYY). <b>ENTER</b>   |
| 3.                 | Amount                        | Enter the amount of the sale. <b>ENTER</b>  |
| 4.                 | Server ID (optional)          | Enter Server ID. <b>ENTER</b>   |
| 5.                 | Tip (3 tips optional)         | Enter tip then <b>ENTER</b> or <b>ENTER</b> to bypass tips. (Tips can be added later for restaurant.) |
| 6.                 | Second Receipt                | Press any key to print second receipt.  |

**DEBIT CARD PURCHASE**

| <b><u>STEP</u></b> | <b><u>TERMINAL PROMPT</u></b> | <b><u>ACTION</u></b>  |
|--------------------|-------------------------------|---|
| 1.                 | Idle Prompt                   | Press <b>PAYMT MODE</b> until terminal displays debit prompt.   |
| 2.                 | Debit Prompt                  | Swipe card.   |
| 3.                 | Amount                        | Enter the amount of the sale. <b>ENTER</b>  |
| 4.                 | Tip (3 tips optional)         | Enter tip then <b>ENTER</b> or <b>ENTER</b> to bypass tips. (Tips cannot be added later.)             |
| 5.                 | Cash Back                     | Enter cash back amount then <b>ENTER</b> or <b>ENTER</b> to bypass.                                   |
| 6.                 | Server ID (optional)          | Enter Server ID. <b>ENTER</b>   |
| 7.                 | PIN                           | Have the customer enter their PIN code. <b>ENTER</b>  |
| 8.                 | Second Receipt                | Press any key to print the second receipt. Paper type must be set to custom for second debit receipt. |

**CHECK PURCHASE**

| <b><u>STEP</u></b> | <b><u>TERMINAL PROMPT</u></b> | <b><u>ACTION</u></b>   |
|--------------------|-------------------------------|--|
| 1.                 | Idle Prompt                   | Press <b>PAYMT MODE</b> until terminal displays check prompt.  |
| 2.                 | Check / Amount                | Enter the amount of the sale. <b>ENTER</b>   |
| 3.                 | Swipe / Enter Check           | Swipe the check through the check reader or manually enter MICR information on the check. <b>ENTER</b> |

**Note: Depending upon the check host, the ABA, Account and Check numbers are entered together or separately. Follow the terminal prompts or contact your check host.**

|    |                       |   |
|----|-----------------------|---|
| 4. | Driver License        | Enter the customer driver's license number. <b>ENTER</b> *  |
| 5. | Driver License State  | Enter the license issuing state. <b>ENTER</b> (Use the ALPHA key to change numbers to letters.) *     |
| 6. | Tip (3 tips optional) | Enter tip then <b>ENTER</b> or <b>ENTER</b> to bypass tips. (Tips cannot be added later.)             |
| 7. | Second Receipt        | Press any key to print the second receipt. Paper type must be set to custom for second check receipt. |

**\* Verification prompts vary the host. Enter requested information when prompted.**

**CASH PURCHASE**

| <b><u>STEP</u></b> | <b><u>TERMINAL PROMPT</u></b> | <b><u>ACTION</u></b>   |
|--------------------|-------------------------------|--|
| 1.                 | Idle Prompt                   | Press <b>PAYMT MODE</b> until terminal displays cash prompt.   |
| 2.                 | Cash Prompt / Amount          | Enter the amount of the sale. <b>ENTER</b>   |
| 3.                 | Tip (3 tips optional)         | Enter tip then <b>ENTER</b> or <b>ENTER</b> to bypass tips. (Tips cannot be added later.)            |
| 4.                 | Server ID (optional)          | Enter Server ID. <b>ENTER</b>  |
| 5.                 | Second Receipt                | Press any key to print the second receipt. Paper type must be set to custom for second cash receipt. |



### VOID

| <u>STEP</u> | <u>TERMINAL PROMPT</u>   | <u>ACTION</u>   |
|-------------|--------------------------|---|
| 1.          | Idle Prompt              | Press <b>VOID</b> until terminal displays VOID/SALE, VOID/FRCD or VOID/RTRN prompt. |
| 2.          | Void                     | Swipe card or manually enter credit card number. <b>ENTER</b>                       |
| 3.          | Expiration date (manual) | Enter card expiration date (MMYY). <b>ENTER</b>                                     |
| 4.          | Amount                   | Enter amount. <b>ENTER</b>  |
| 5.          | Second Receipt           | Press any key to print the second receipt.  |

**NOTE: Transactions that have batched cannot be voided, they must be returned. Debit transactions cannot be voided.**

### RETURN – CREDIT CARD

| <u>STEP</u> | <u>TERMINAL PROMPT</u>   | <u>ACTION</u>  |
|-------------|--------------------------|--|
| 1.          | Idle Prompt              | Press <b>RETURN</b> to display the RETURN prompt.                      |
| 2.          | Return                   | Swipe card or manually enter credit card number. <b>ENTER</b>          |
| 3.          | Expiration date (manual) | Enter card expiration date (MMYY). <b>ENTER</b>                        |
| 4.          | Amount                   | Enter amount. <b>ENTER</b>   |
| 5.          | Authorization Number     | Enter the authorization number from the original receipt. <b>ENTER</b> |
| 6.          | Second Receipt           | Press any key to print the second receipt.                             |

### RETURN – DEBIT CARD

| <u>STEP</u> | <u>TERMINAL PROMPT</u> | <u>ACTION</u>  |
|-------------|------------------------|--|
| 1.          | Idle Prompt            | Press <b>PAYMT MODE</b> for the debit prompt.                          |
| 2.          | Debit Prompt           | Press <b>RETURN</b> for the RETURN prompt.                             |
| 3.          | Return                 | Swipe card.  |
| 4.          | Amount                 | Enter amount. <b>ENTER</b>   |
| 5.          | Authorization Number   | Enter the authorization number from the original receipt. <b>ENTER</b> |
| 6.          | PIN                    | Have the customer enter their PIN code. <b>ENTER</b>                   |
| 7.          | Second Receipt         | Press any key to print the second receipt.                             |

**The surcharge amount will be added to the Return if surcharge is set for Transaction not just Cash Back.**

### VERIFY

| <u>STEP</u> | <u>TERMINAL PROMPT</u>   | <u>ACTION</u>   |
|-------------|--------------------------|---|
| 1.          | Idle Prompt              | Press <b>VERIFY</b> to display verify prompt.                 |
| 2.          | Verify                   | Swipe card or manually enter credit card number. <b>ENTER</b> |
| 4.          | Expiration date (manual) | Enter card expiration date (MMYY). <b>ENTER</b>               |
| 5.          | Amount                   | Enter amount. <b>ENTER</b>                                    |

### FORCED

| <u>STEP</u> | <u>TERMINAL PROMPT</u>   | <u>ACTION</u>   |
|-------------|--------------------------|---|
| 1.          | Idle Prompt              | Press <b>FORCED</b> until terminal displays forced prompt.                                  |
| 2.          | Forced                   | Swipe card or manually enter credit card number. <b>ENTER</b>                               |
| 3.          | Expiration date (manual) | Enter card expiration date (MMYY). <b>ENTER</b>   |
| 4.          | Amount                   | Enter amount. <b>ENTER</b>  |
| 5.          | Authorization Number     | Enter the Auth No received via voice authorization or from the Verify receipt. <b>ENTER</b> |
| 6.          | Second receipt           | Press any key to print the second receipt.  |

### PRINT LAST MERCHANT RECEIPT

| <u>STEP</u> | <u>TERMINAL PROMPT</u> | <u>ACTION</u>   |
|-------------|------------------------|---|
| 1.          | Idle Prompt            | Press the <b>ALPHA</b> key.   |
| 2.          | Receipt Menu           | Press <b>3</b> to print the last merchant receipt.  |
| 3.          | Not Available          | The last receipt is not available to print. A cancelled or declined transaction can void this function. |



**PRINT LAST CUSTOMER RECEIPT**

| <u>STEP</u> | <u>TERMINAL PROMPT</u> | <u>ACTION</u>   |
|-------------|------------------------|---|
| 1.          | Idle Prompt            | Press the <b>ALPHA</b> key.   |
| 2.          | Receipt Menu           | Press <b>1</b> to print the last customer receipt.  |
| 3.          | Not Available          | The last receipt is not available to print. A cancelled or declined transaction can void this function. |

**PRINT ANY RECEIPT**

| <u>STEP</u> | <u>TERMINAL PROMPT</u> | <u>ACTION</u>  |
|-------------|------------------------|--|
| 1.          | Idle Prompt            | Press the <b>ALPHA</b> key.  |
| 2.          | Receipt Menu           | Press <b>2</b> to print any receipt.                                     |
| 3.          | Choose EDC             | Press the number that corresponds with the EDC type of original receipt. |
| 4.          | Transaction?           | Enter the transaction number. <b>ENTER</b>                               |

**OPEN TAB**

| <u>STEP</u> | <u>TERMINAL PROMPT</u>   | <u>ACTION</u>   |
|-------------|--------------------------|---|
| 1.          | Idle Prompt              | Press the <b>EDIT</b> key.  |
| 2.          | Tab Menu                 | Press <b>2</b> to open a tab.   |
| 3.          | Tab Limit                | The default max tab amount of \$50 is displayed. Press <b>ENTER</b> to accept the amount or <b>MENU</b> to change the amount. |
| 4.          | Enter Tab Amount         | Enter the new max tab amount. <b>ENTER</b>  |
| 5.          | Swipe Card               | Swipe card or manually enter credit card number. <b>ENTER</b>   |
| 6.          | Expiration date (manual) | Enter card expiration date (MMYY). <b>ENTER</b>   |

**CLOSE TAB**

| <u>STEP</u> | <u>TERMINAL PROMPT</u>  | <u>ACTION</u>  |
|-------------|-------------------------|--|
| 1.          | Idle Prompt             | Press the <b>EDIT</b> key.   |
| 2.          | Tab Menu                | Press <b>3</b> to close a tab.   |
| 3.          | Close Tab Menu          | Press the number that corresponds with the desired access method. For example <b>5</b> for Transaction#. |
| 4.          | Transaction#            | Enter the transaction number. <b>ENTER</b>   |
| 5.          | Transaction Information | <b>ENTER</b>   |
| 6.          | Tab Entry               | Enter the total tab amount. <b>ENTER</b>   |
| 7.          | Tip Entry               | Enter the tip amount. <b>ENTER</b>   |

**DRIVERS LICENSE VERIFICATION**

| <u>STEP</u> | <u>TERMINAL PROMPT</u> | <u>ACTION</u>  |
|-------------|------------------------|--|
| 1.          | Idle Prompt            | Press the Hot Key that was assigned the Drivers License function.                          |
| 2.          | Swipe DL               | Swipe the Drivers License.   |
| 3.          | Function Choice        | Press <b>1</b> for tobacco sale, <b>2</b> for liquor sale or <b>3</b> to scan the license. |
| 4.          | Swipe DL               | Swipe another license or press <b>MENU</b> to return to idle prompt.                       |

A Print Setup Report (see Quick Reference Guide) will print a list all Hot Key assignments if this information is unknown.

**CLOSE CURRENT BATCH**

| <u>STEP</u> | <u>TERMINAL PROMPT</u> | <u>ACTION</u>   |
|-------------|------------------------|---|
| 1.          | Idle Prompt            | Press the <b>BATCH</b> key. Press <b>ENTER</b> 3 times. |



**Common Error Responses, and Quick Fixes\***

\***Warning:** You may damage programming in terminal if directions are not followed correctly!

**Invalid Batch Sequence:**  
(All Nurit Terminals except for 8000 GPRS)

| <u>Display</u>          | <u>Do</u>   |
|-------------------------|---|
| 1. Credit Sale Account  | Press Menu  |
| 2. Menu Screen          | Press #4 (Host Params)  |
| 3. Host Params          | Press #1 ( Host Params)   |
| 4. Enter Password       | Two digit Day/Two digit Month (DD/MM)   |
| 5. EDC Parameters       | Press #1 (FDR ETC PLU Cr)   |
| 6. FDR ETC PLU Cr       | Press #2 (Device ID)  |
| 7. Device ID            | Type in any 4 digit number other than the one being shown on screen<br>Press Enter. |
| 8. FDR ETC PLU Cr       | Press Menu  |
| 9. Save Parameters?     | Press Enter   |
| 10. EDC Parameters      | Press Menu twice  |
| 11. Menu Screen         | Press #5 (System Options)   |
| 12. System Options      | Press #4 (Set Batch #)  |
| 13. Enter Password      | Two digit Day/Two digit Month (DD/MM)   |
| 14. New Batch No:       | Type in new batch number, just add one number to the one in there.<br>Press Enter   |
| 15. Are You Sure?       | Press Enter   |
| 16. System Options      | Press Menu twice.   |
| 17. Credit Sale Account | Try running a card.   |

**8000 GPRS Invalid Batch Sequence:**

| <u>Display</u>      | <u>Do</u>  |
|---------------------|--|
| Credit Sale Account | Run Sale with any Credit Card for \$99,999.02 (This will reset your terminal, and get rid of Invalid Batch Sequence) |

**Bad Credit Batch:**

Simply Run any Credit Card for \$0.01, then batch out your terminal.

**Rad Fail/Rad Off :\*\***

Wireless Terminals Only

| <u>Display</u>      | <u>Do</u>                   |
|---------------------|-----------------------------|
| Credit Sale Account | Press Menu                  |
| Menu Screen         | Press # 4 (Host Params)     |
| Host Params         | Press # 3 (Print EDC Setup) |

\*\*If This Fails to regain signal strength, refer to Store and Forward Directions

If you are still having issues please call us at one of the following numbers:

**Office:** 877-964-1622

**Cell Phones:** (24 Hour)

Raul : 917-577-6237 Josh: 917-577-3149

Michael DiGiovanni: 917-327-6012

Steven Ballan: 917-577-5398 |